

ZBAGxxx

OPERATING INSTRUCTIONS

wenglorTPL


INTRODUCTION

This Technical User Guide contains warnings and guidance for correct and safe operation of the product. These instructions must be followed at all times. wenglorTPL will not be held responsible for problems caused by using the product contrary to these instructions and the Warranty will be deemed invalid.

UNPACKING

This product is packed at the factory using suitable materials for safe transport. To open the package, do not use any cutting blade to avoid damaging the product(s). Please use the delivered accessories if needed. (Do not use any other products or equivalents to replace the delivered accessories). In the event of damage occurring during shipping, it must be reported to the carrier at time of delivery (including noting the damage in writing on the delivery documents). It is also your responsibility to notify wenglorTPL in writing of the damage within 24 hours of receipt of the package. If these instructions are not followed, wenglorTPL reserves the right not to accept requests for return and exchange of damaged products.

DESCRIPTION

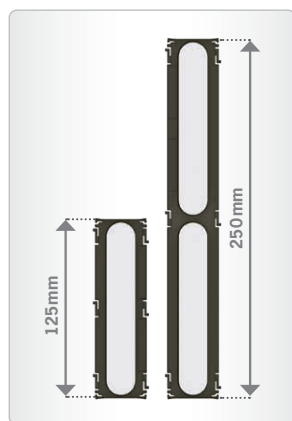

Configuration is marked on the product

The ZBAGxxx product will **WIDEN THE BEAM** of your bar light. They are available in 2 dimensions: **125mm** and **250mm**.

REFERENCES AVAILABLE:

	125mm		250mm	
	STANDARD	POLARISED	STANDARD	POLARISED
NARROW $\pm 10^\circ$	ZBAG001	ZBAG101	ZBAG006	ZBAG106
MEDIUM $\pm 17^\circ$	ZBAG002	ZBAG102	ZBAG007	ZBAG107
WIDE $\pm 25^\circ$	ZBAG003	ZBAG103	ZBAG008	ZBAG108
LINE $\pm 9-16^\circ$	ZBAG004	ZBAG104	ZBAG009	ZBAG109
POLARIZER only	N/A	ZBAG105	N/A	ZBAG110
TRANSPARENT	ZBAG005*	N/A	N/A	N/A
BLACK	94346**	N/A	N/A	N/A

* Transparent window. It has no effect on the angle. It is used to fill in spaces if you are creating multiple illumination angles along the length of your BAR (eg. Curve effect).


** Black diffuser, used to simulate using a smaller sized BAR (lab use only).



NOTE: ZBAGxxx only increase the angle of the light.

They cannot focus the light more than that provided by the embedded lens.

■ HOW TO ATTACH THE ZBAGxxx TO YOUR BAR

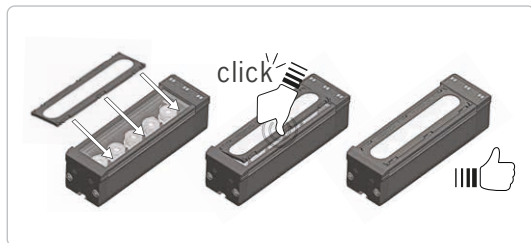

- 1 – Put the springs on one side of the ZBAGxxx into the groove on the side of the window on the BAR,
- 2 – Firmly push the 3 springs with your thumb until they «click» into place*,
- 3 – ZBAGxxx is now secure.
Turn on the illumination to use.


* Double check all springs have clicked in place. ZBAGxxx MUST be mounted flat for correct operation.

■ LARGER PRODUCTS



For larger products, simply start at one end & add them on in a line. Always check that all the springs are secure.

■ HOW TO REMOVE THE ZBAGxxx FROM YOUR BAR

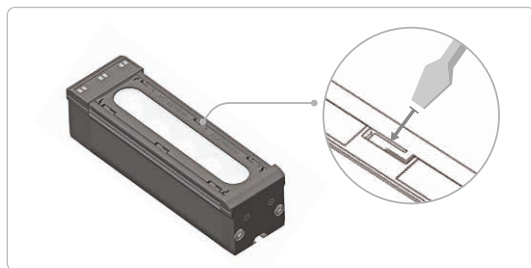

- 1 – Use a small flat head screwdriver as a wedging tool & place it into the gap between the spring and the BAR,
- 2 – Apply a light prising motion to pop the spring out of place,
- 3 – Repeat for remaining springs on the same side,
- 4 – Lift out of BAR.

wenglorTPL

wenglor Straße 3
88069 Tettnang
Germany



+49 (0)7542 5399 800

support@wenglor.com

www.wenglor.com